



Sun Clinical Laboratories

9349 Telstar Avenue, STE. A & B, El Monte, CA 91731

Tel: (626) 234-2355

Fax: (626) 234-2381

PLEASE HAVE PATIENT TO READ THIS NOTE BEFORE GIVING iFOB KIT TO THE PATIENT


糞便潛血反應檢查(免疫法定量) 大便檢體採集方法

Sample Collection Procedure of iFOB Stool Blood Testing

1. 請於採檢盒標籤上填寫姓名、年齡及採便日期。
Write down your name, age, and collecting date on the Label of the sample collection tube.
2. 請勿將採便管內液體倒出或於管中加水。
DO NOT pour out the fluid in the tube or add water in it as well.
3. 將衛生紙舖在便器上，將大便排在紙上面，不要排在水中。
Place paper on top of toilet water and deposit fecal sample on the paper. **DO NOT** deposit fecal sample in toilet water.
4. 轉開蓋子取出採便棒，
在大便上不同的地方插 5 下，
取少量的大便到能覆蓋溝紋或毛刷的程度即可。
Open the cap with the sampling probe on top of the sampling tube, stroke 5 times on different spots of stool using the sampling probe, and only collect small amount of it.

溝紋或毛刷 適量

過多

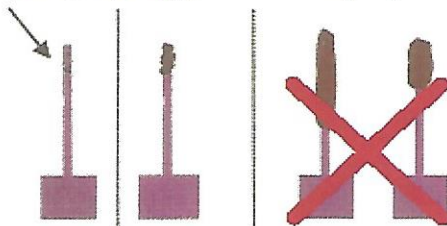

Good Amount of Sample | Too Much Sample

5. 請保持採檢盒外部乾淨，將綠色蓋子插回收集管，並旋緊蓋子以免外漏。
Please keep the tube outside clean. Plug the cap back to the sample collection tube.
Make sure the cap is close tightly to secure the sample.